Magner 3500 USER MANUAL

3.5 POCKETS BANKNOTE SORTER



Version	V1.0.0
DATE	October 31, 2025

1.0.0	
1.0.0	First version



Warning

Please follow the below instruction It can cause serious injury or death by violating the instruction

Installation

- Make the enough space
- Do not install the product where it may be exposed to water and fire
- Do not install the product on the unstable place
- Do not install the product with abnormal condition like high humidity, low temperature and so on

Power

- If the power cable is wet or dry, it can cause the fire or electronic shock
- Do not turn off the power by unplugging the power cable
- Do not pull the power cable strongly
- Keep the child away from the power cable

Use

- The product should be used under the environment specified in the instruction manual
- Do not open the cover of the product during operation.
- Turn off the power when checking the inside of the product for cleaning or replacing parts

Packing

▶ Product



©Option

▶ Printer




▶ External Display



Contents

1. Main Display	6
2. Machine Operation	<u>7</u>
2-1. Total	<u>7</u>
2-2. Currency	<u>7</u>
3. Value/ATM/FIT	<u>8</u>
4. Mode	<u>9</u>
5. Batch	<u>g</u>
6. Setting	<u>10</u>
6-1. Function	<u>10</u>
2-2. LCD	<u>12</u>
7. Multi Currency	<u>12</u>
7-1 Multi-currency(MIX)	<u>12</u>
7-2 Multi-currency(SC)	<u>12</u>
7-3 Multi-currency(SP)	13


1. Main Display

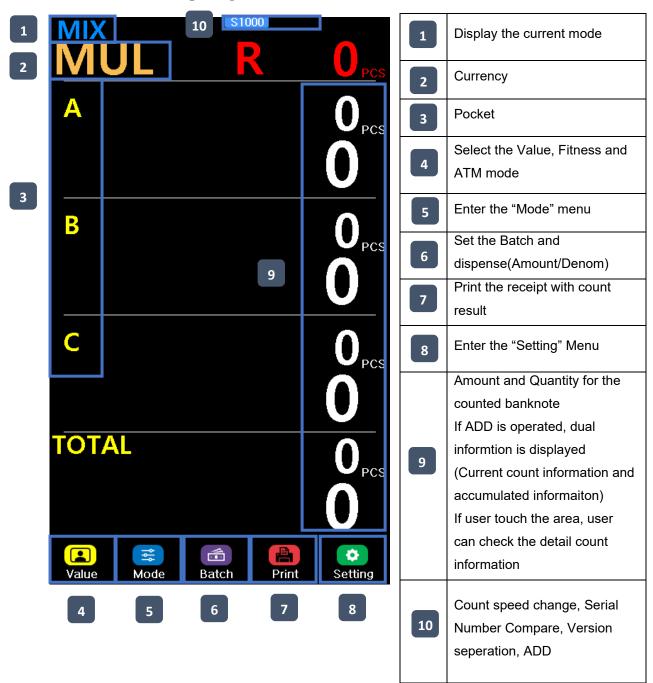


2. Machine Operation

2-1. Total

User can check the details of the count result, serial number, and error of the banknote by touching the screen

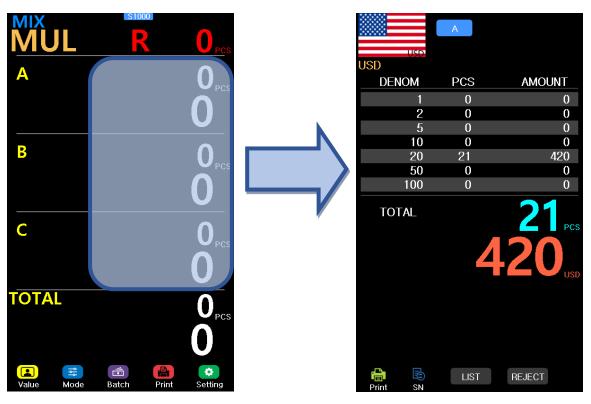


2-2. Currency

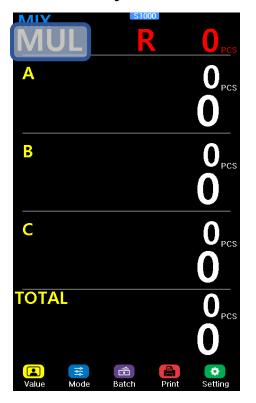

User can select the currency by touching the CURRENCY icon(Max. 50 currencies)

3. Value/ATM/FIT

User can select the Value/Fitness/ATM by touching the icon

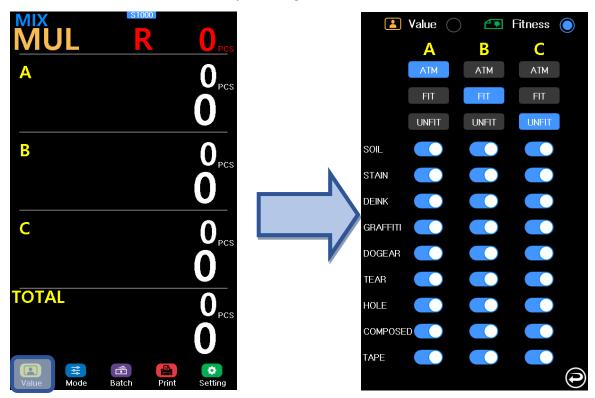


User can set the details for ATM/FIT/UNFIT with each pocket and each functions

4. Mode


User can set the various mode for banknote count in Mode menu

- Count mode, Direction, Version, FIT, Batch, Value, Denom, S/N, ADD, Manual ADD, Black List

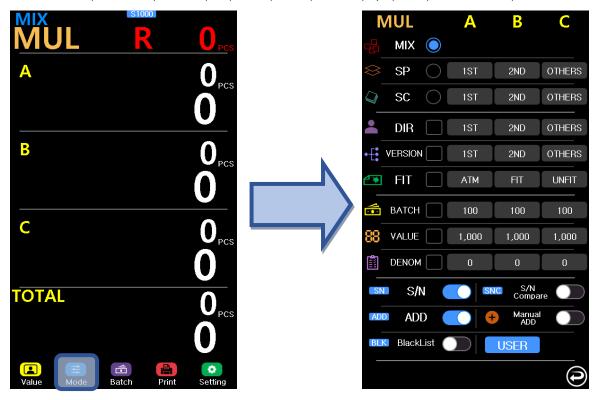

5. Batch

Set the batch of stacker and the other related functions

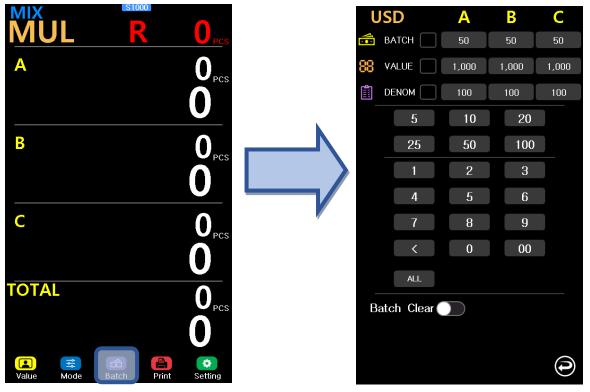


- Value : User can set the amount
- Denom : User can set the quantity of each denomination
- BatchClear : Reset the count information in main display

(Condition: Batch is full, Banknotes are taken from stacker and start count again)

6. Setting

- Function, Printer, LCD, Pocket Capacity, Date, LAN, Record, SN Search

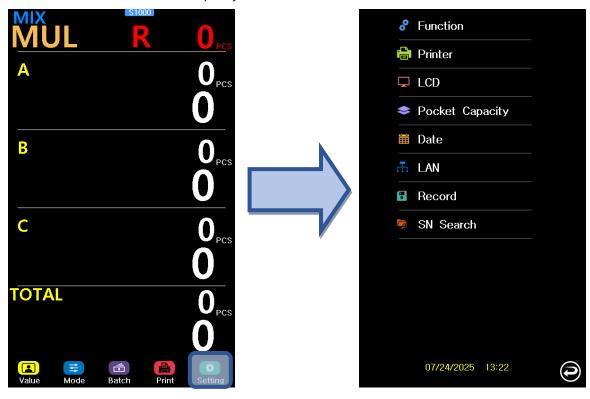


6-1 Function



- Count : Select the count start(Auto: Automatic, Manual: Press button)
- Delay: Select the timing for count start when the banknote is on the hopper
- Speed : Count speed
- Buzzer : Set the sound on/off
- Batch Warning : will be developed
- CF: Make the sound when the counterfeit is rejected
- Door : Select the stacker cover use
- Info: Machine serial number and software version

6-2 LCD

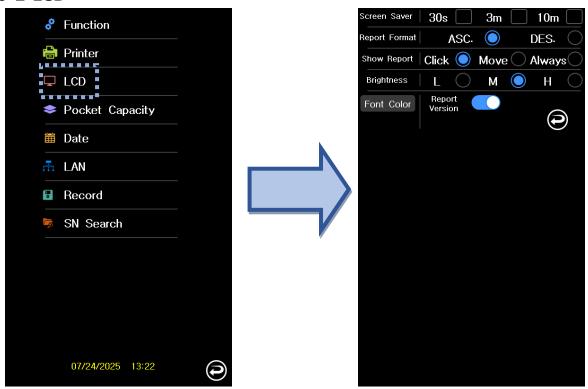



- Screen Saver : Select the time for the screen saver operation
- Report Format : Select the display order in detail count result(Ascending or Descending)
- Show Report : will be developed.
- Brightness : Select the brightness level
- Font Color: Select the color of quantity and amount in main display
- Report Version : Banknote version will be displayed in count detail screen

7. Multi Currency

7-1 Multi-currency(MIX)


- Display is changed according to the number of counted banknote

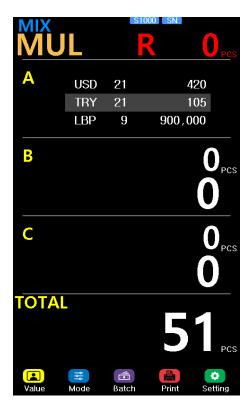


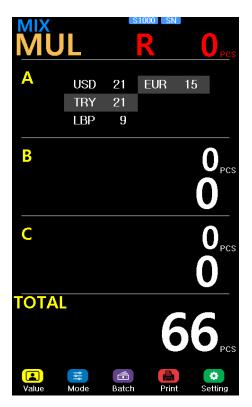

7-2 Multi-currency(SC)

- Set the currency for each pocket

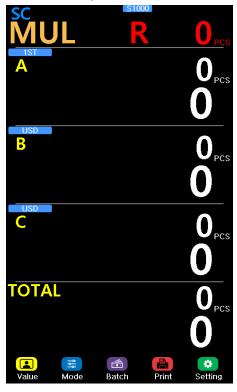

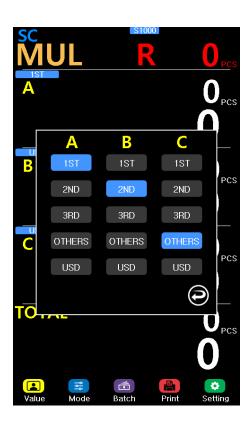

7-3 Multi-currency(SP)

- Set the currency and denomination for each pocket

